 




Canon PowerShot SD1300 IS Lens Replacement

In this guide you will take apart the Canon PowerShot SD1300 IS camera and replace the faulty lens.

Written By: Clayton

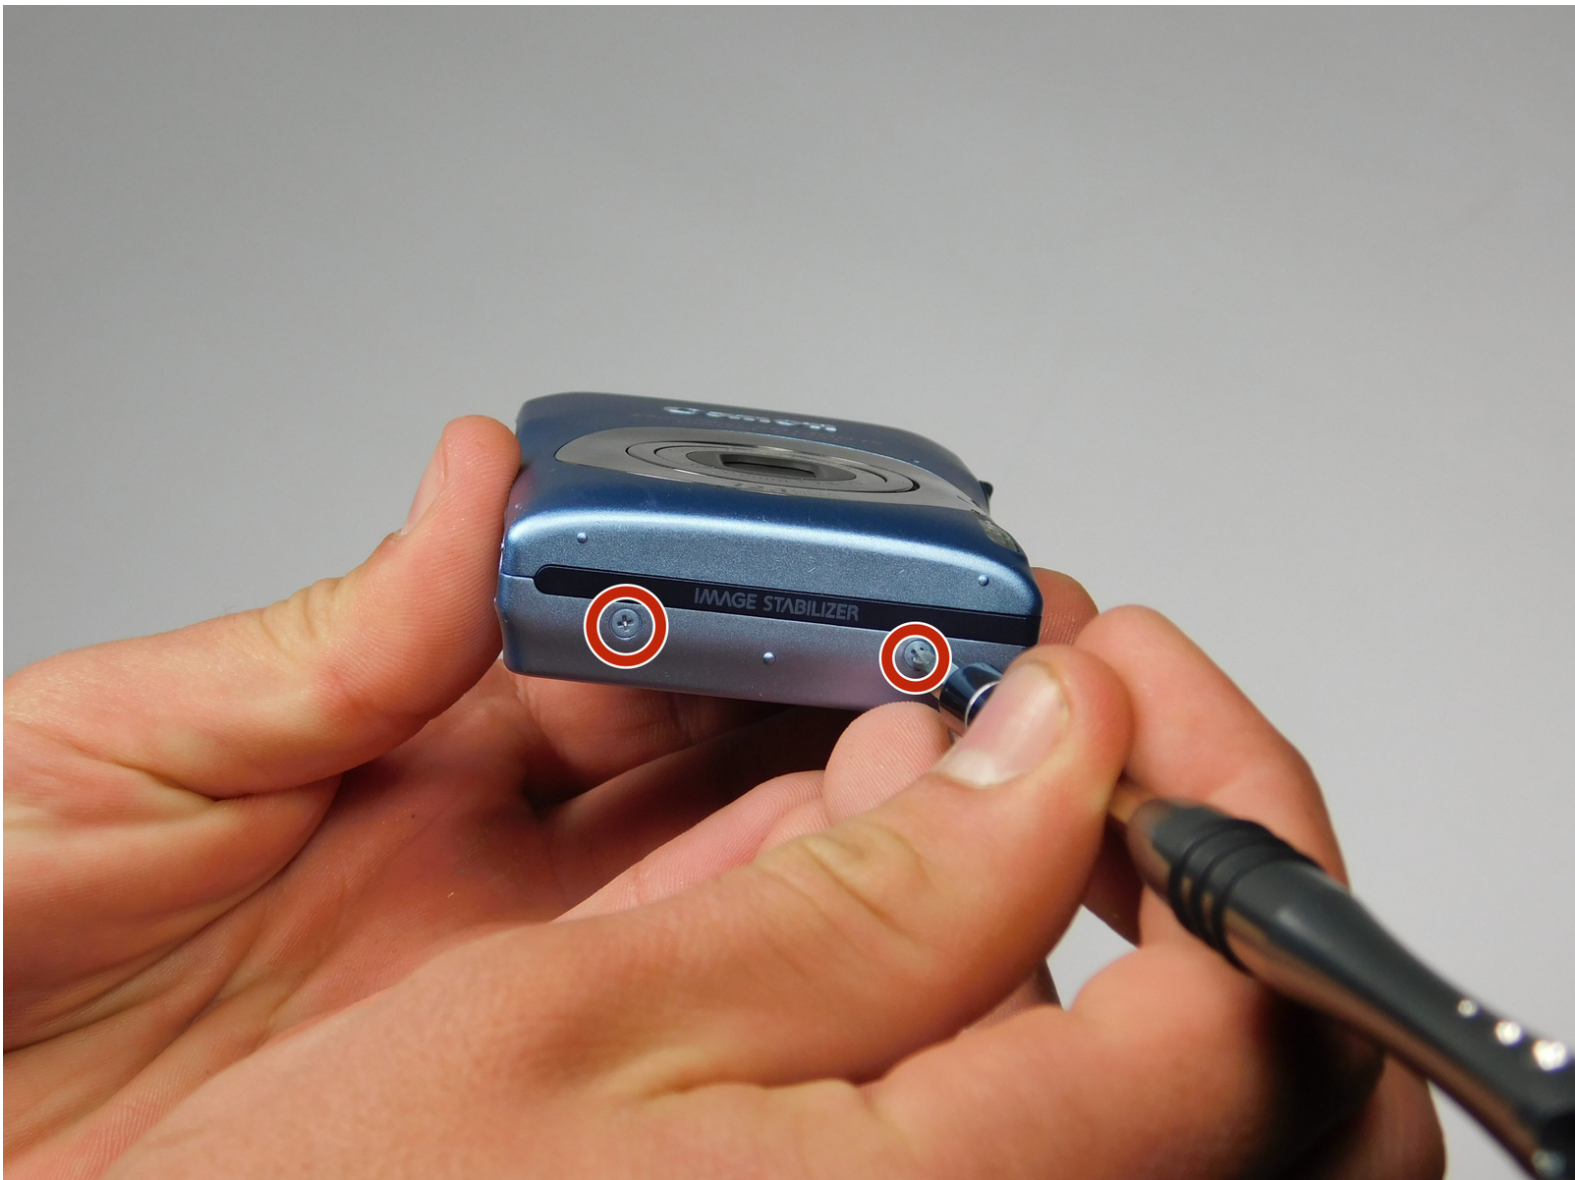

INTRODUCTION

This guide will show you how to properly replace a faulty lens on your Canon PowerShot SD1300 IS.



TOOLS:

- [JIS Driver Set](#) (1)

J00

- [iFixit Opening Tools](#) (1)
-

Step 1 — Lens



- Remove the two 2mm J00 screws on the right exterior.
- Remove a single 4 mm J00 on the bottom exterior.
- Remove a single 3mm J00 on the left exterior.

Step 2



 
- Once the front shell of the camera is removed the back shell should slide off just the same.

Step 3



- Use one of your plastic opening tools to separate the screen from the main body of your PowerShot.

Step 4

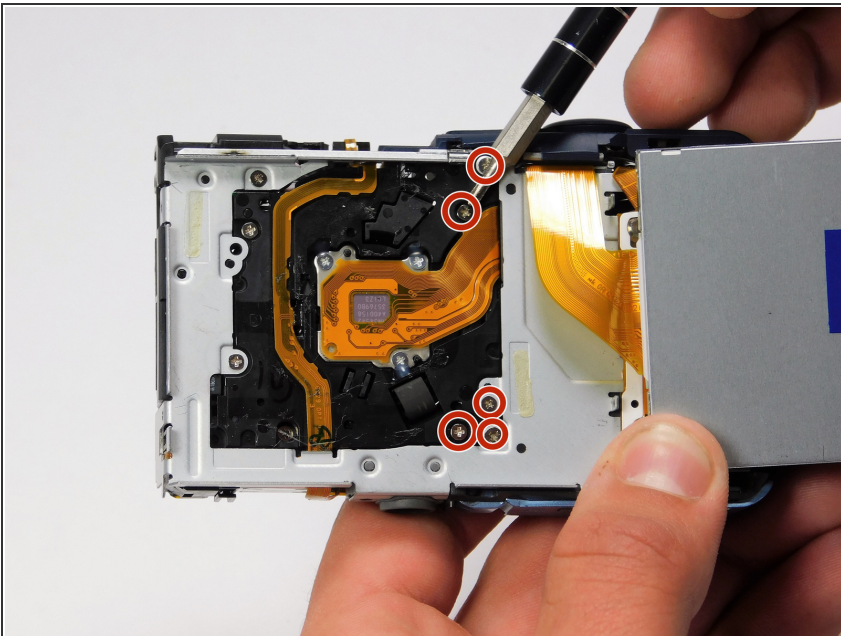

- Remove five of the 3mm J00 screws under the screen to release the lens for replacement.
- Lens assembly should be removed through the front of the camera once screws are removed.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-21 12:46:25 AM.